



The Candle Maker +PLUS Instruction Manual

Thank you for purchasing The Candle Maker by Chandler & Me. Please read this manual carefully to ensure safe and proper use and enjoyment.

Instructions for using your Candle Maker with the 1 litre jug (supplied) in Small Batch Mode ①

Place the unit on a flat, even surface such as a kitchen counter and plug it in. To turn the unit on simply place the jug onto the heating element, all lights will flash briefly and a short beep will be heard. Buttons 1, 2, 3 will start flashing and the machine is now ready for use.



1. Pour your pre-measured amount of soy wax (up to 500g) into the jug and press button ① to start the melting process




2. When button ② is flashing pour your pre-measured fragrance into the jug and press this button to start the stirring process



3. When button ③ lights up it is time to lift the jug and pour the wax carefully into your candle jar


Before you pour: Prepare your jar by sticking the wick firmly to the base being careful to ensure it is centered. Use a wick holder to help support your wick in the centre, as per the diagram.

Pouring: Pour the melted wax slowly but surely into the jar, being careful to avoid the wooden wick holder.

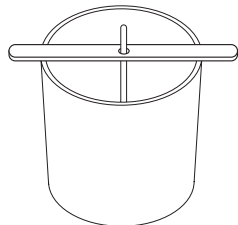

For the best results let your candle cool slowly in an area of the house with a relatively stable temperature.

Tip: If you have a marble or stone benchtop, place the candle on a wooden board or towel and try not to disturb the jar while the wax is setting.

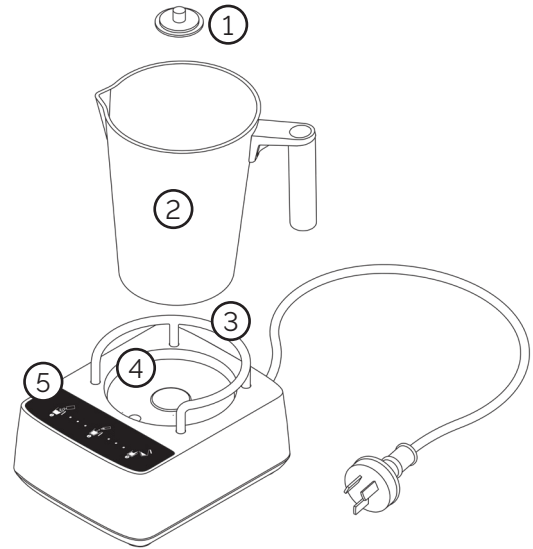

Components

- | | |
|-----------------------|--------------------|
| 1. Stirrer attachment | 4. Heating Element |
| 2. Jug (1 litre) | 5. Control Panel |
| 3. Cradle | |

Changing the mode. The Candle Maker + has three pre-set modes that provide greater flexibility for batch size and higher heat and manual controls.



Small Batch Mode



Best for: making 1 to 2 medium size soy candles at a time using the standard jug up to 500g.

Press button ① to start.

Large Batch Mode



Best for: making 4 - 5 medium size soy candles at a time using the large jug up to 1 litre. Tip! Always feed the wax flakes in as it melts to avoid overloading the stirrer.

Press button ② to start large batch mode.

High Heat Mode



Best for: melting of beeswax to 82C. Can be used with both the standard and large jug.

Press button ③ to start high heat mode which will melt your wax to around 82C. You can then remove the melted wax or continue the stirring phase.

Variable control mode. You can manually control the phases of the unit to experiment with different waxes and recipe's. Press button ③ to enter variable control mode and while in this mode you can press button ③ at any time to fast forward and button ① to rewind.

The Candle Maker Instruction Manual

Safety

- Please read these instructions carefully and save for further reference.
- This appliance is intended to be used in a household environment.
- When you first unpack The Candle Maker appliance, please check for any damages or defects and contact the supplier immediately if any issues are found.
- Please check that all items are included and dispose of the packaging carefully. Keep plastic bags and small items away from children and pets.
- The Candle Maker should only be used for the melting and mixing of ingredients supplied by Chandler & Me and/or our authorised distributors; any unintended use, including using other ingredients, may damage the unit and will void your warranty.
- The Candle Maker is designed for making soy candles using pre-tested and pre-measured ingredients packs available at www.chandlerandme.com and authorised waxes and fragrances available through our distributors.
- The manufacturer is not responsible for any defects, accidents or potential injury as a result of misuse of this appliance.
- If this unit malfunctions please disconnect the power immediately. Do not attempt to repair the unit yourself. Please notify the distributor immediately.
- The Candle Maker is recommended for ages 10 and up. Please supervise younger children and anyone who may have reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- During use, do not touch the heating element or the body of the jug. Both of which can reach temperatures of over 85 degrees celsius.
- After use do not touch the heating element surface as it is subject to residual heat.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Avoid spillage on the power plug socket.

Cleaning

- When cleaning the appliance, unplug the unit from the mains power supply. Wipe the unit with a damp cloth. Be careful as the heating element may still be hot.
- DO NOT immerse the main unit into water, doing so will damage the internal electrical components and your warranty will be voided. Immersing the unit in water while plugged in to the mains may cause a severe electric shock!
- Clean the jug using hot soapy water.
- There may be some slight soy wax residue in the jug, washing in hot soapy water will dissipate the wax and the water can be flushed down the sink. The soy wax is plant based and eco-friendly.

Trouble Shooting

- If the jug is accidentally lifted from the heating element part way through the process simply place it back on the element. The unit will reset back to stage one, press the flashing icon again.
- If you walk away and attend to other tasks around the home while making a candle don't worry, the unit will wait for you at whatever stage it is up to. The unit will turn off after two hours if a button has not been pressed or the jug lifted.

NZ/AU Model: CM5117-ANZ

UK Model: CM5119-UK

EU Model: CM5119-EU

Voltage: AC240V 50/60Hz

Power: 680W

Heater: Plate heating

Volume: 150ml to 1 Litre

Cord length: 1.05 metres

Unit Dimensions: 160mm L x 130mm W x 160mm D

Warranty

This unit carries a 12-month warranty against manufacturing defects. Should this unit malfunction please contact your distributor immediately. The unit is designed for use with approved ingredients supplied exclusively by Chandler & Me and our authorized distributors. You can purchase ingredients from the Chandler & Me website or your local distributor. Using other ingredients in your Candle Maker, or using the unit for any purpose other than authorized by Chandler & Me may void your warranty.